


***Installation Guide***  
***for***  
***VS-R20D RF Dummy Reader***




MAR., 12.2014  
Support team  
***Union Community Co., Ltd.***

# 1. How to set the internal switch (SW51)

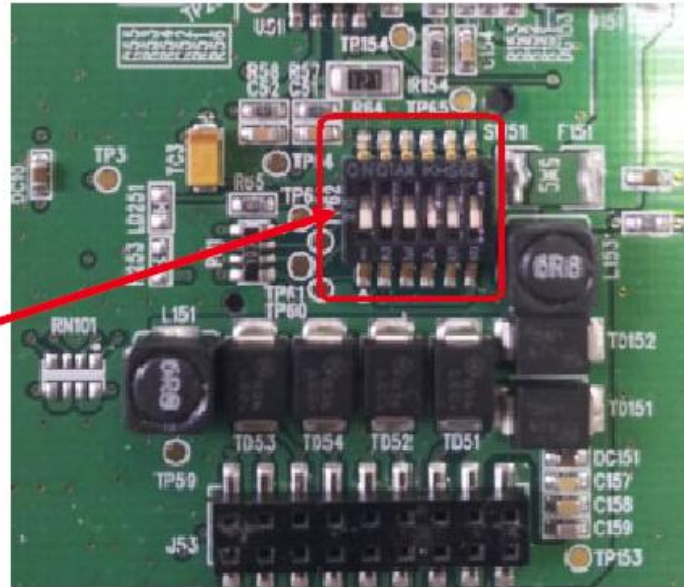

SW51 Select S/W

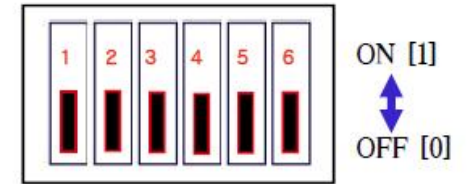

\* Default all OFF [0]

SW51 Select S/W Function

	1	2	3	4	5	6
Function	485 ID Select			Weigand [1] RS485 [0]	Reserve	RS485 Termination Resistor

## 2. Bracket for VS-R20D



### 3. Cables for VS-R20D

